



Keys

■ Electronic key



- Locks and unlocks the doors
- Opens the trunk
- Starts and stops the hybrid system

■ Mechanical key




- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull.

■ Wireless remote control



- 1 Locks the doors
 - 2 Unlocks the doors
 - 3 Opens the trunk
 - 4 Sounds the alarm
- (To stop the alarm, push any button on the wireless remote control.)

The wireless remote control can also be used to open the windows and moon roof. To do so, simply press and hold  button.

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag. For details on starting the hybrid system, see page 17.

■ Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

■ Exiting the vehicle



To lock the vehicle, press the button on the door handle.

■ Opening the trunk



To open the trunk, press the button.

For details on what to do when the electronic key battery becomes discharged, see page 52.

Anti-theft System

The anti-theft system includes the following features to help protect your vehicle from theft.

■ Hybrid vehicle immobilizer system



The hybrid vehicle immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

■ Alarm

When forcible entry is detected, the alarm attracts attention to the vehicle by sounding the horn and flashing the exterior lights.

When all the doors are locked, the security indicator light comes on and begins to flash after approximately 30 seconds to indicate that the system is armed.

To stop the alarm, start the hybrid system or unlock the doors or trunk using the entry function or the wireless remote control. (The alarm will stop after several seconds.)

■ Steering lock



The steering lock is engaged when the driver's door is opened with the power switch OFF.